

TERMA Inclusive spring rocker



Inclusion • Fun • Rehabilitation



Product code: WDBUJ01

Product designation:

The Inclusive Spring Rocker is a device that performs a therapeutic and fun function at the same time. In addition to rehabilitation centers, the integration rocker is perfect for schools and kindergartens with children of various fitness levels, as well as for public playgrounds.

It is a device used to play by attracting yourself to the barriers and as a bouncing device. The device, apart from having fun, improves proprioception and coordination and supports kinesiotherapy of the upper limbs.

People with disabilities, also in wheelchairs, can play on the device at the same time, together with able-bodied people in various configurations of these users.

Materials:

Construction: steel profiles with epoxy primer, painted and powder coated, stainless steel element

Platform: milled HPL board

Backrest: HDPE board

Foundations: concrete class min. B-15

Dimensions and parameters:

External device dimensions: 1290 x 2010 mm

Device height from the platform to the top railing: 1041 mm

Maximum swing angle: 3 degrees

Device weight without foundations: 330 kg

Safety zone dimensions: 1500 mm from each device outer edge

Concrete foundation blocks: 280x280x260 mm

Profile diameters:

Ø 42.4

Ø 32

Profile 60x40

Profile 30x40

Other device dimensions:

Free fall height: none

Functional area dimensions: 5010 x 4290 mm

Maximum load: 250 kg

Foundation depth: 752 mm

Functional zone area: 22 m ²

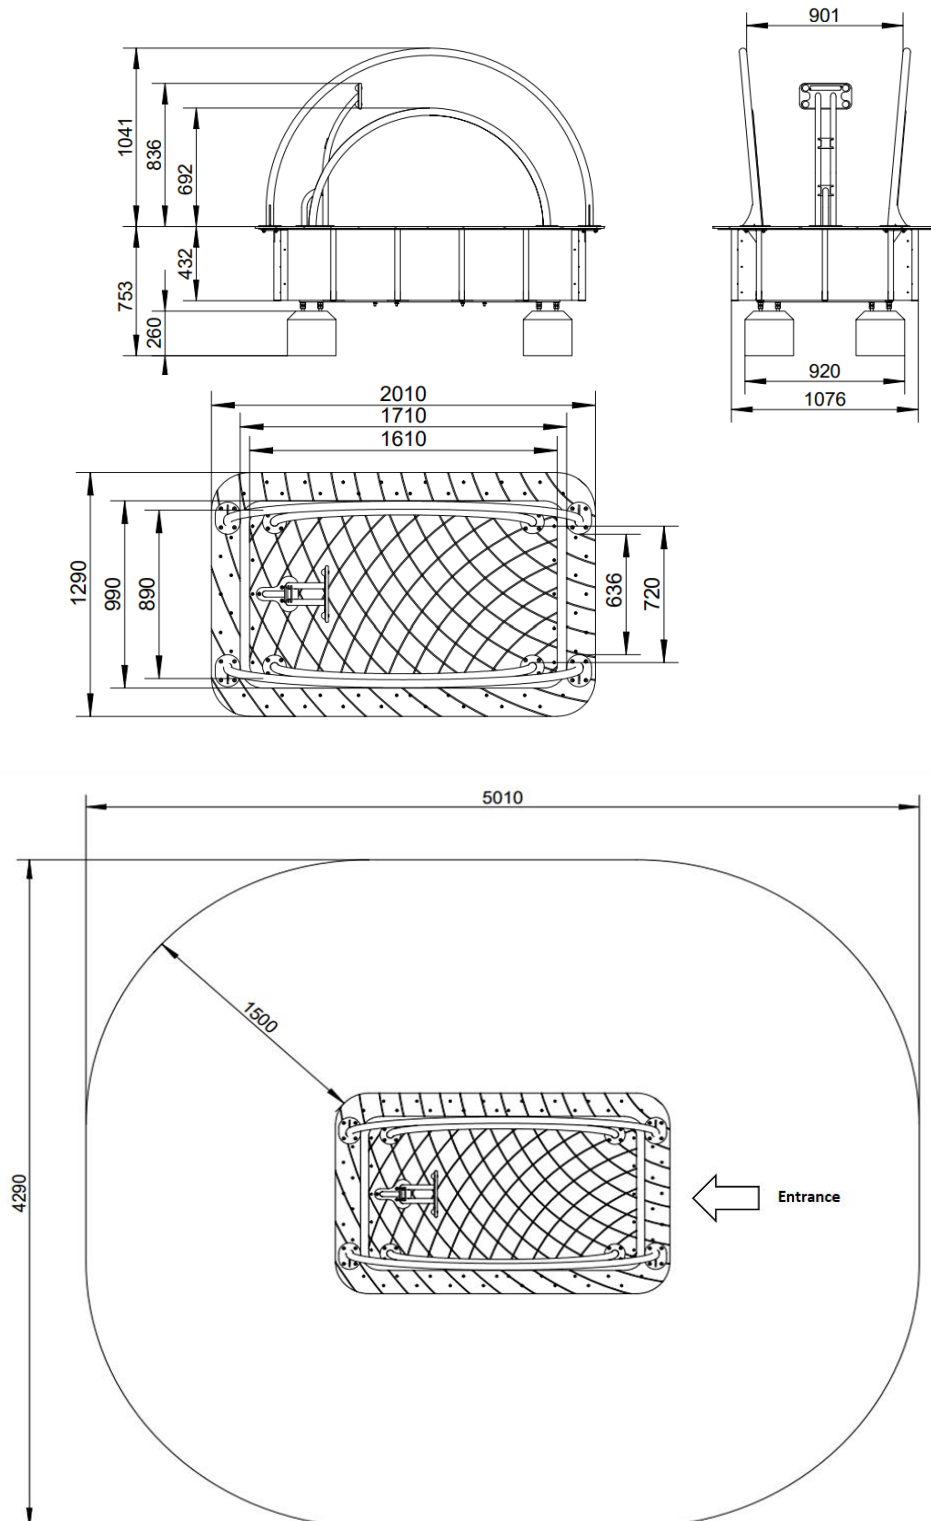


Fig. Inclusive Spring Rocker dimensions with the safety zone

Safety:

Inclusive spring rocker complies with EN 1176.

Maximum allowed weight of users on the platform: 250 kg

Installation:

Inclusive spring rocker is installed on four concrete blocks. The impact attenuating layer is not required.

Performance:



The idea of the inclusion is to provide environment for integration of wheelchair users with users without impairments. On the Inclusive spring rocker there is enough space to fit one person on the wheelchair and one person without disabilities. At the same time the rocker allows self-operation or to be used only by users without disabilities.

Make sure to provide appropriate surface surrounding the roundabout for the wheelchair users easy access!

The design is accessible to all users, both with disabilities and without.

Manufacturer:



TERMA Sp. z o.o.

Czaple 100

80-298 Gdańsk

Poland

M: +48 / 609 900 451

www.termamed.pl

www.facebook.com/termaplay